



Sony Ericsson W810i Logic Board Replacement

Written By: Ben Micucci



INTRODUCTION

This guide will show the user how to remove the W810i Logic Board

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [T7 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Logic Board



- Make sure the phone is off and press down firmly against the Cingular icon with your thumb
- Slide the panel down and remove latch

Step 2



- Lift and pull battery out
- Remove the SIM card if you have one

Step 3



- Remove the two outer screws using a T-7 head for a screwdriver

Step 4




- Remove the two smaller inner screws with the Mini-Phillips screwdriver head

Step 5




- Remove the Back (camera side) Faceplate with the blue hand-wedge

Step 6

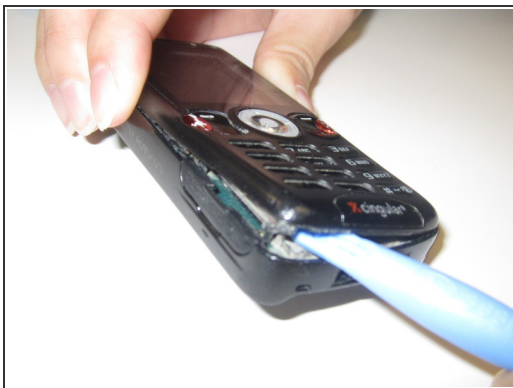

- Flip the phone over and pry off the front (keypad side) faceplate with multiple blue hand-wedges
- Separate keypad from logic board by turning it upside down and allowing it to fall off

Step 7

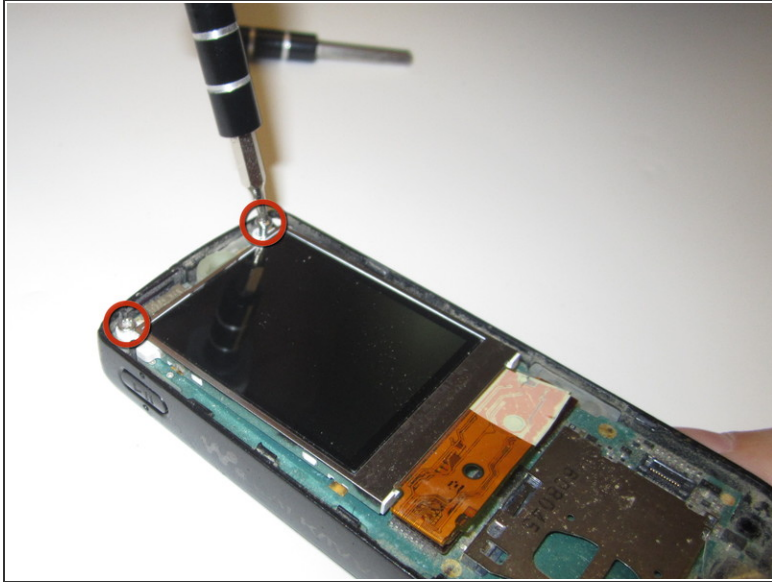

- Remove the two remaining screws in the top corners of the phone using a T-6 screwdriver head
- Remove the logic board with multiple blue hand-wedges, be careful not to snap the logic board in half, along with snapping the wiring from the logic board

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 06:31:21 PM.